

Ice Machine Cleaning & Sanitizing

ONTROL

SWITCH

SERVICE

min.

3

min.

CONTRO

SWITCH

HOSHIZAKI


KMD-410MAH, MWH, MRH KMD-460MAH, MWH, MRH KMD-530MAH, MWH, MRH

ATTENTION!



Cleaning Prep:

- Remove the Front Panel, move the control switch to OFF. After <u>3 min.</u>, move the control switch to ICE, then replace the Front Panel.
- 2 After <u>3 min.</u>, remove the **Front Panel**, move the control switch to **OFF**. This removes the cubes from the evaporator. Replace the **Front Panel**.
- 3 Remove all ice from the dispenser unit/ice storage bin.
- **ATTENTION! IF ON DISPENSER,** turn off the dispenser power supply after dispensing all the ice.

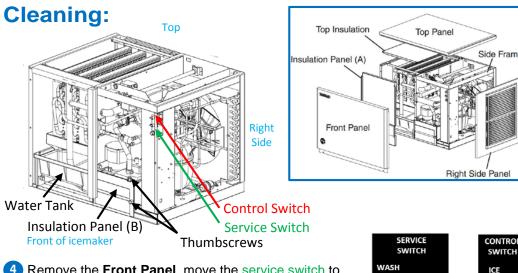

- 4 Remove the Front Panel, move the service switch to DRAIN. Move control switch to SERVICE. Replace the Front Panel.
- 5 After <u>2 minutes</u>, remove the Front Panel, move the control switch to OFF.
- Dilute Hoshizaki Scale Away with warm water (see Table below). Remove the Insulation Panel (A) and pour cleaning solution into the water tank.

KMD-410, 460, 530	
Scale Away	9.5 fl. oz (281 ml)
Warm Water	1.8 gal. (6.8 l)

In bad water conditions, a more thorough cleaning may be required. Move control switch to OFF, then turn off the power supply. Dilute 5 oz. of Scale Away to 1 gallon of warm water. Remove and clean the float switch assembly (see Float Switch Cleaning on back), water supply tubes, spray tubes, water tank, and pump motor and float switch assembly. Rinse thoroughly, then replace in their correct positions. Turn the power supply back on. Otherwise, continue to Step 8.



CIRCULAT

After 2 min.

SWITCH

SERVICE

DRAIN

G continued on the back...

Do not leave icemaker unattended when panels are off
AMMONIA Cleaners
Sanitizing:
• Dilute 5.25% chlorine bleach* with warm water (see Table below)
KMD-410, 460, 530 Bleach 0.9 fl. oz (27 ml) Warm Water 1.8 gal. (6.8 l)
* Use bleach without additives.
Remove the front panel & 16 insulation panel (A)
 Pour the sanitizing solution into the water tank
 Replace all the panels, except the front panel

- Move service switch to WASH and control switch to SERVICE, replace the front panel
- After 15 minutes, remove front panel
- Move service switch to DRAIN, replace the front panel
- After 2 minutes, remove front panel
- Move control switch to OFF

(18)

19

KMD-460 & 530M_H:

Loosen the two thumbscrews on the pump insulation panel (B) and remove the panel.

Disconnect the discharge hose, the drain valve hose, and the overflow drain hose.

Disconnect the pump motor and then the float switch connectors from the control board.


Remove the two thumbscrews securing the pump

motor and float switch assembly. Pull out the water tank, cube guide, and pump motor

and float switch assembly all together.

Remove the screw securing the float switch to the top of the assembly, remove the float switch*.

See Step 7 for cleaning steps. Reassemble in the reverse order they were removed.

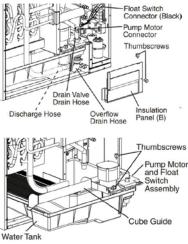

KMD-410M_H:

Loosen the two thumbscrews securing the pump motor bracket.


Disconnect the discharge hose.

Disconnect the pump motor and float switch connectors from the side of the control box.

While pushing up on the snap tab, pull out the water tank, cube guide, pump motor bracket, and pump motor and float switch assembly all together.

Remove the pump motor bracket securing the float switch to the top of the assembly, remove the float switch*.

See Step **7** for cleaning steps. Reassemble in the reverse order they were removed.

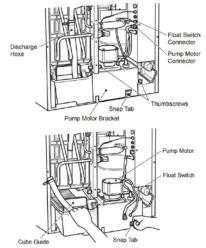

SERVICE

SWITCH

CIRCULATE

WASH

DRAIN

SERVICE

SWITCH

CIRCULATE

WASH

DRAIN

ONTRO

SWITCH

After

30 min.

* Remove retainer rod (take care not to bend excessively) from bottom of the float switch housing & clean all float parts.

- 8 Replace all the **Panels**, except the **Front Panel**. Move the service switch to **WASH**, and the control switch to **SERVICE**. Replace the **Front Panel**.
- 9 After <u>30 minutes</u>, remove the Front Panel, move the service switch to DRAIN. Replace the Front Panel.
- **ATTENTION!** To prevent damage to the water pump, do not leave the control switch on SERVICE for extended periods when water tank is empty.

Cleaning Rinse:

- 10 After <u>2 minutes</u>, remove the **Front Panel**, move the **control switch** to **ICE**. Replace the **Front Panel**.
- After <u>3 minutes</u>, move the service switch to WASH, and the control switch to SERVICE. Replace the Front Panel.
- 12 After <u>5 minutes</u>, remove the Front Panel, move the service switch to DRAIN. Replace the Front Panel
- 43 After <u>2 minutes</u>, remove the Front Panel, move the control switch to OFF.
- 14 Repeat 3x (Steps 10 thru 13) to rinse thoroughly. Continue to Sanitation Step 15 on front...



↓ sanitizing continued...

20

22

23

RINSE 1: (Steps 20-22)

- Move control switch to ICE, replace front panel
- After 3 minutes, remove the front panel
- Move service switch to WASH and control switch to SERVICE, replace the front panel
- After 5 minutes, remove the ²¹ front panel
- Move service switch to DRAIN, replace the front panel
- After 2 minutes, remove the front panel
- Move control switch to OFF, replace the front panel

RINSE 2:

- Repeat RINSE 1 (Steps 20–22) for complete ice/food safety
- Clean the dispenser unit / ice storage bin liner with a neutral cleaner (dish soap)
- Rinse thoroughly
- Move control switch to ICE, 25 replace front panel

ATTENTION!

IF ICEMAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning

DO NOT use ammonia type cleaners

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals

AMMONIA Cleaners



CLEANING SCHEDULE

Scoop Dish soap, rinse well Water Filters Check psi, change if req'd Exterior Dish soap & damp cloth Bin Door/Top Kit Warm water & clean cloth Icemaker/Bin Follow these instructions Water Supply Inlet Clean inlet screen Condenser Inspect. Clean with brush Water Hoses Inspect. Replace if req'd DAILY |
 MONTHLY |
 YEARLY

DZ