


Wunder-Bar PH10-119 SANITARY DRIP CUP INSTALLATION INSTRUCTIONS FOR

PH10-120 POST-MIX SANITARY DRIP CUP KIT (INCUDED WITH NEW POST-MIX AND JUICE DISPENSERS)
PH10-123 POST-MIX SANITARY DRIP CUP CONVERSION KIT (REPLACES EXISTING OLD STYLE DRIP CUP)

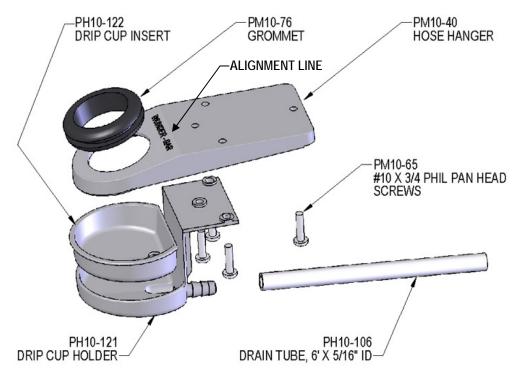

PH10-120 Complete Post-Mix Sanitary Drip Cup Kit Includes:

One (1) PH10-119 Sanitary Drip Cup Assembly (Includes PH10-121 Holder, PH10-122 Insert, & PH10-106 Tube)

One (1) PM10-40 Hose Hanger

One (1) PH10-76 Grommet

Three (3) PM10-65 Screws (#10 x 3/4" Phillips, Pan Head, S/S)

Two (2) PM10-66 Screws, Manifold Mounting—Not Shown (#10 x 2" Phillips, Pan Head S/S)

PH10-123 Post-Mix Sanitary Drip Cup Conversion Kit Includes *:

One (1) PH10-119 Sanitary Drip Cup Assembly (Includes PH10-121 Holder, PH10-122 Insert, & PH10-106 Tube) One (1) PH10-76 Grommet

Three (3) PM10-65 Screws (#10 x 3/4" Pan Head, Phillips)

* PH10-123 Conversion Kit requires the re-use of the existing PM10-40 Hose Hanger.

INSTALLATION INSTRUCTIONS:

- 1. (FOR CONVERSION KIT ONLY) Remove the existing PM10-40 Hose Hanger (and old style Drip Cup) from the bar top by un-screwing the three mounting screws. Discard the screws and old style Drip Cup.
- 2. Position the PH10-121 (Drip Cup Holder) into the recess located under the PM10-40 (Hose Hanger) and align the three matching mounting screw holes.
- 3. Position the combined PH10-121 and PM10-40 under the countertop, in the desired mounting location, with the alignment line lined-up with the front edge of the countertop.
- 4. Install three PM10-65 (#10 x 3/4" Phillips, Pan Head Screws) through the three mounting holes and into the countertop, completely, <u>until no screw threads are visible or exposed below the screw hole mounting</u> bosses.
- Install one end of the PH10-106 (6' Drain Tube) onto the PH10-121's (Drip Cup Holder) drain nipple, fully
- 6. Extend the other end of the PH10-106 (6' Drain Tube) to the floor sink or drain. Do not install Drain Tube end into the ice bin or sink drain.
- 7. Install the PM10-76 (Grommet) into the PM10-40 (Hose Hanger).
- 8. Install the PH10-122 (Drip Cup Insert) into the PH10-121 (Drip Cup Holder)

POST-MIX PH10-119 Drip Cup Installation Instructions.pub

REV060209