





16-1521 Kit, Carbonator, McCann's, Conversion, 3/8" ASSE 1022
IC # 29874

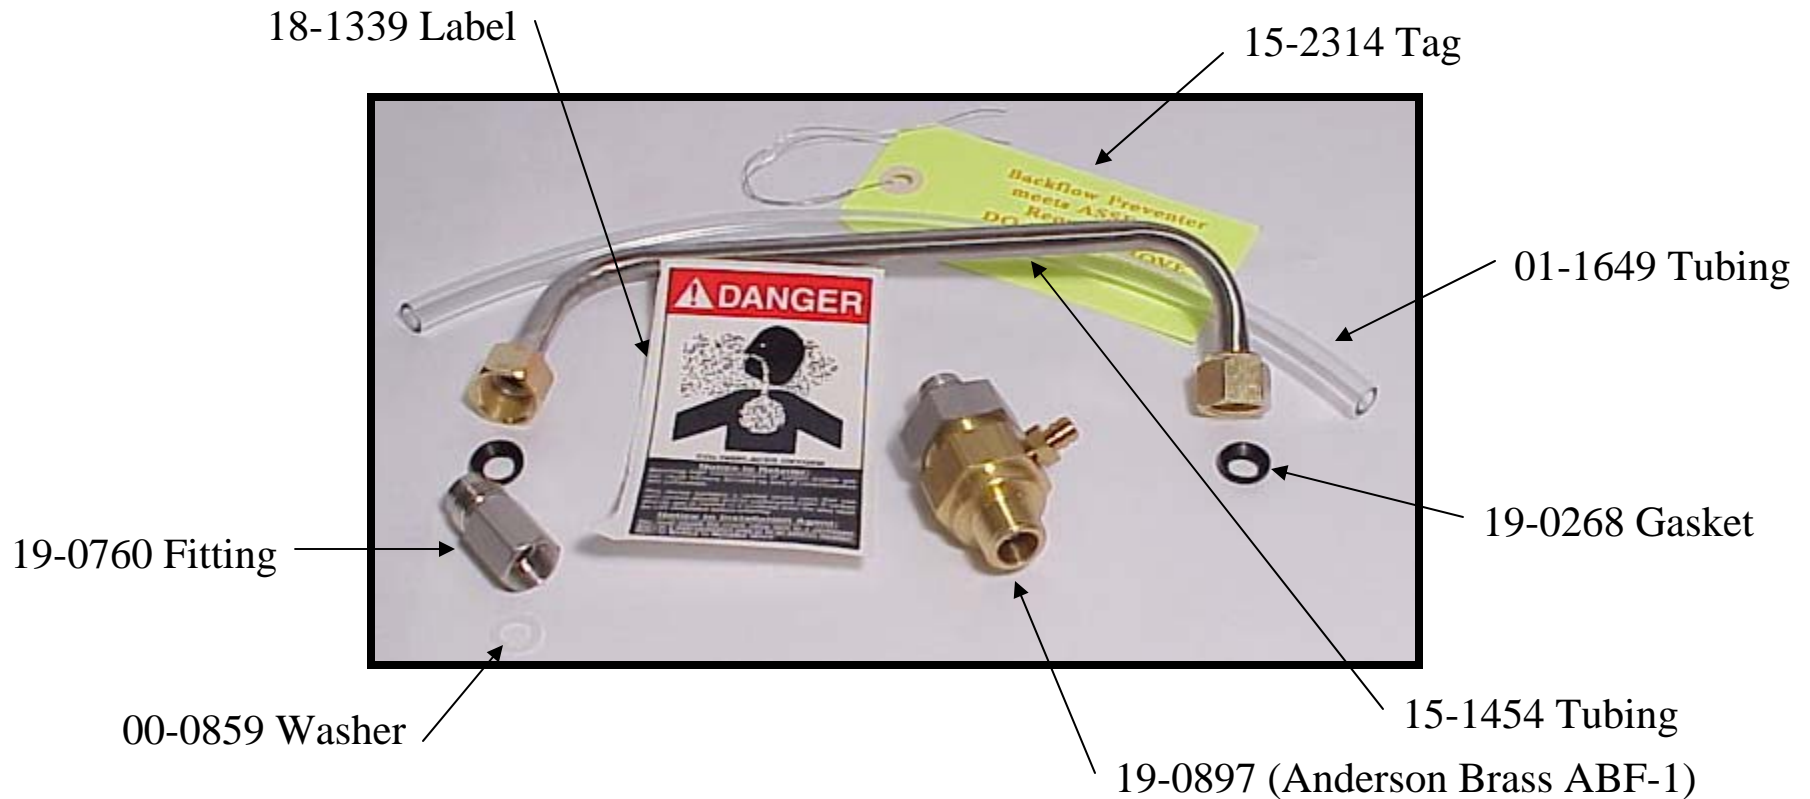



McCann's

KIT 16-1521 INSTALLATION AND RETROFITTING INSTRUCTIONS FOR CARBONATORS ANDERSON BRASS ABF-1 ASSE 1022

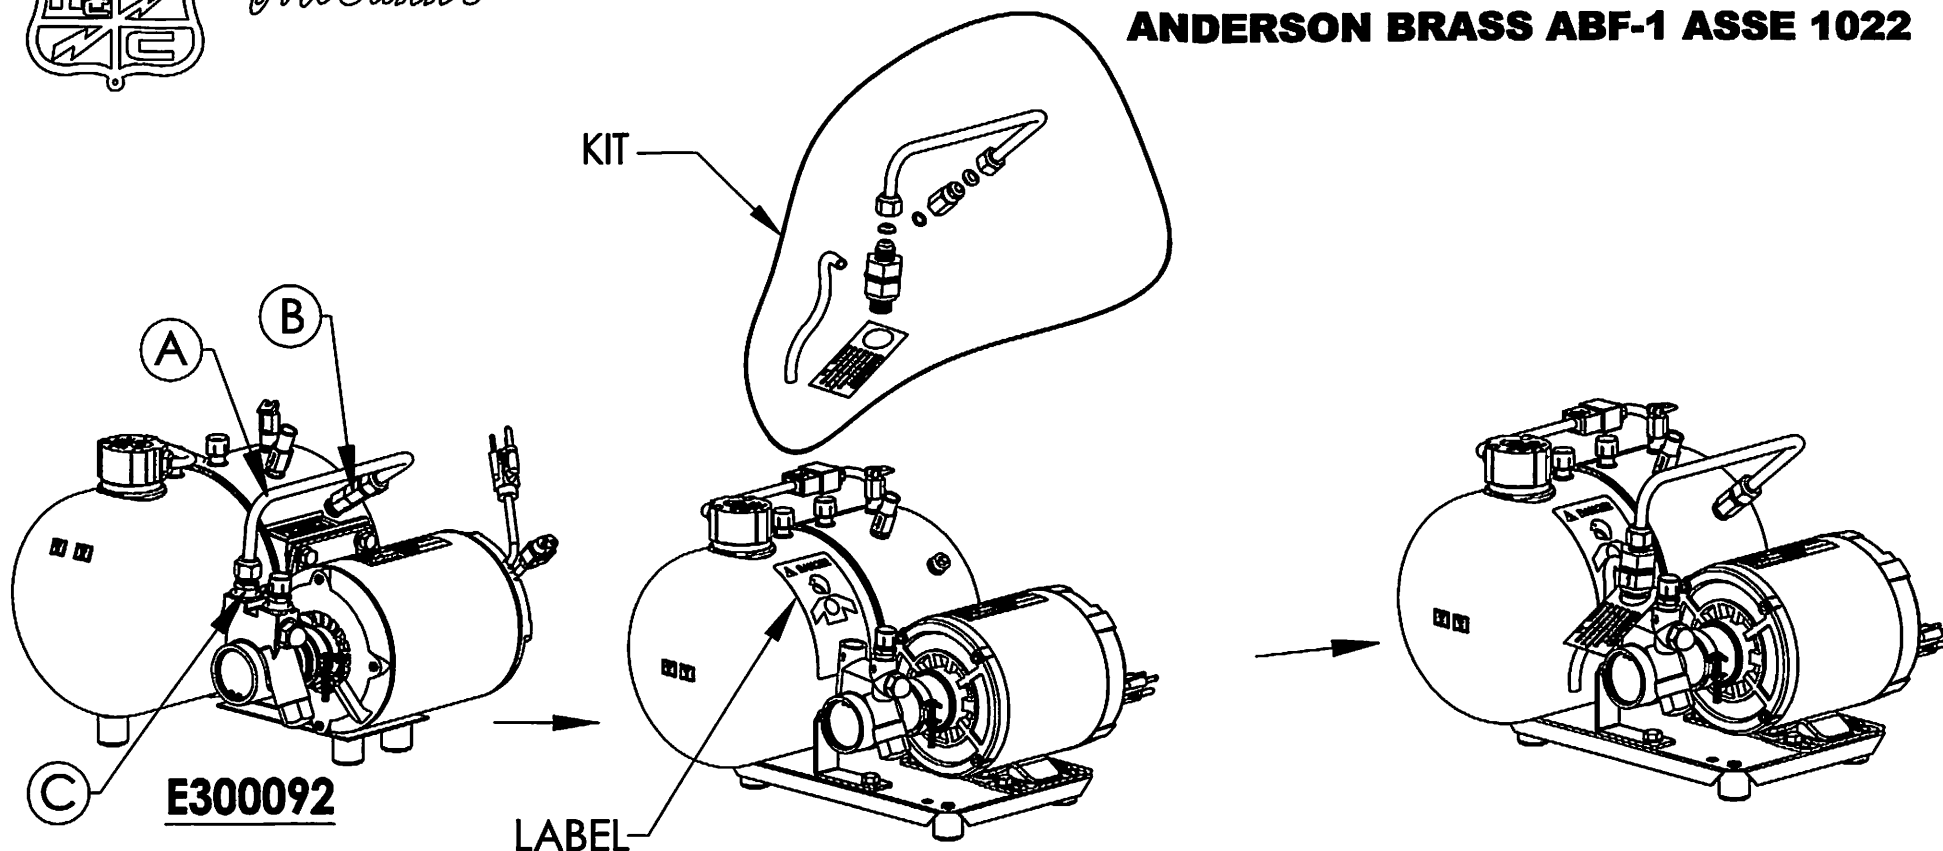

TO DISCONNECT OLD CHECK VALVE AND INSTALL ANDERSON BRASS ABF-1 ASSE 1022

1. SHUT OFF POWER TO CARBONATOR.
2. SHUT OFF CO₂ TO CARBONATOR.
3. SHUT OFF WATER TO CARBONATOR.
4. BLEED OFF PRESSURE IN CARBONATOR TANK BY LIFTING PRESSURE RELIEF VALVE LEVER.
5. REMOVE AND DISCARD EXISTING WATER INLET TUBING (ITEM A), EXISTING CHECK VALVE (ITEM B) AND FITTING (ITEM C).
6. INSTALL KIT (16-1521) UNTO PUMP & TANK AS SHOWN. NOTE: ARROW ON THE ABF-1 SHOULD POINT AWAY FROM THE PUMP. USE NEW FLAT WASHER AND FLARE GASKETS INCLUDED IN KIT AND TIGHTEN ALL FITTINGS APPROPRIATELY. ATTACH LABEL (18-1339) APPROXIMATELY WHERE SHOWN IF NECESSARY.
7. SEE "DANGER" LABEL (18-1339) FOR FURTHER INSTRUCTIONS.
8. TO CONTINUE, FOLLOW STANDARD CARBONATOR START-UP PROCEDURE.

17-5136 REV. D

10/14/07