

The following illustrates how to adjust Portion Controller on the Lancer Electric Valve (LEV) with the top off feature.


Adjust Portion Controller

1. Simultaneously, press and hold the SMALL CUP and EXTRA LARGE CUP buttons for 1 second, release when the red icon to the right of the POUR/CANCEL button starts blinking.
6. After programming all drink sizes, press and release POUR/CANCEL to end programming mode.

NOTE

The blinking LED indicates the programming mode is active.

2. Put desired amount of ice in cup and place under nozzle.
3. Press and hold selected size button (small, medium, large, or extra large) until the cup fills to desired portion, then release.
4. Wait for foam to settle, then actuate the button again to top off. (Optional)
5. Repeat Steps 2-4 for remaining drink sizes.

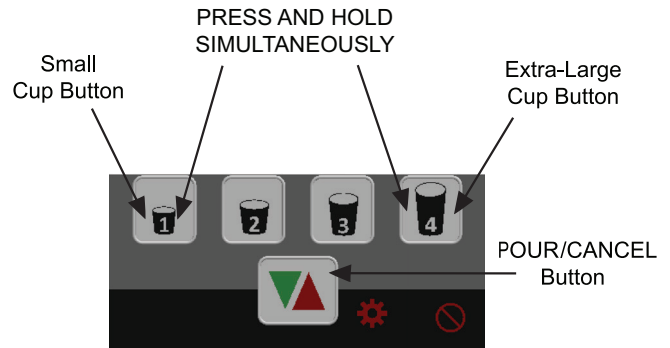

NOTE

The portion control has full memory retention when programming and in case of power failure.

Operation

1. Place a cup under the valve and momentarily press the cup size button to dispense a portioned drink as programmed above.
2. Momentarily press POUR/CANCEL to stop a portioned dispense in progress.
3. Push and hold POUR/CANCEL to manually pour.

NOTE


LED turns on during a manual or portioned dispense.

Timed Pour

1. Simultaneously press the MEDIUM CUP and LARGE CUP buttons to initiate a 4 second pour. LED will blink twice per second.

NOTE

Timed pours are only to be used for setting the water flow rate.

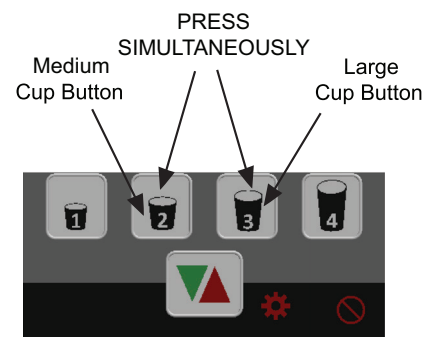

For more information visit lancerworldwide.com or call Tech Support/Warranty: 800-729-1550